


(Svenska)


Monteringsinstruktion - Quicktent (Popup Tält)

Läs nogga igenom instruktionerna innan montering


- 1.** Placera tältet i mitten av det önskade området. Ta ur tältet ur väskan. Låt två personer stå på motsatta sidor, var och en håller i ett ytterben. Lyft tältet från marken och ta ett steg bakåt, stanna när ramen är nästan helt utsträckt.

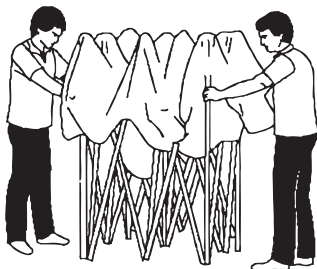


- 2A.** Greppa botten av diamantformen (som visat) på motsatta sidor. Lyft upp och ta ett steg bakåt tills tältet är helt utdraget, och var noga med att inte klämma fingrarna. (För större tält, som 3x6, se 2B)

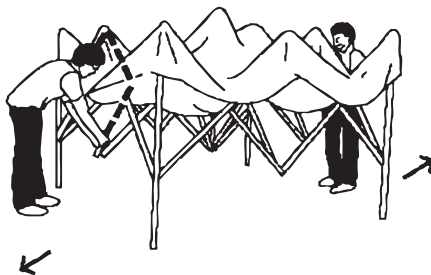


- 2B.** (För större tält, som 3x6): Varje person flyttar till mittbenet på den längre sidan av tältet. Greppa botten av diamantformen (som visat), lyft upp och ta ett steg bakåt samtidigt tills tältet är helt utdraget, och var noga med att inte klämma fingrarna vid änden av låsningen.

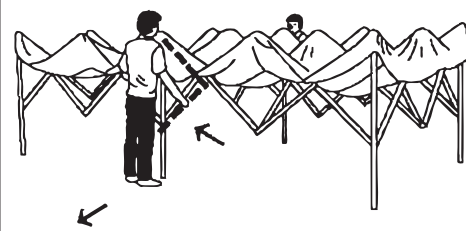

- 4.** Aktivera autoslidern vid varje hörn genom att trycka uppåt med ena handen medan du håller nere toppen av benet med den andra handen. Snap-knappen kommer att låsa fast i spåret. Upprepa på alla ben.

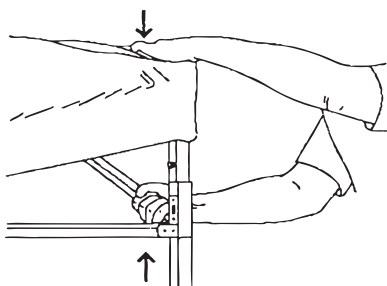

- 5.** Lyft två angränsande ytterben och dra ut de inre benen tills de låses på plats. Upprepa på alla ben. Hög eller jämna ut tältet med hjälp av justeringshålen som finns nära botten av varje ben.

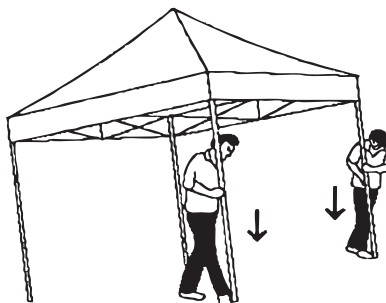


Viktigt!

- **Blåsiga förhållanden:** Använd tältspikar eller tältvikter.
- **Kraftig vind:** Ta ner tältet.
- **Våt tyg:** Låt tältet torka helt innan det fälls ihop.
- **Förvaring:** Förvara i väska när tältet inte används.
- **Rengöring:** Använd mildt rengöringsmedel och vatten.
- **OBS:** Lämna inte tältet utan uppsikt.


Efter användning

- 1.** Lyft två ben lätt, tryck på snap-knappen och teleskopera de inre benen upp i de yttre benen. Upprepa på motsatt sida.

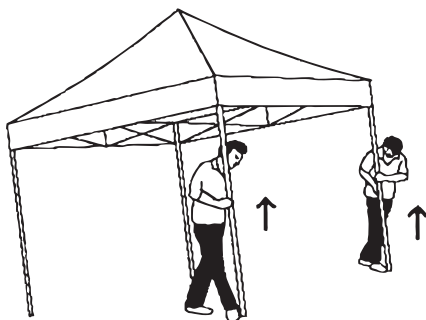

- 2.** Frigör autoslidern vid varje hörn genom att trycka på snap-knappen för att släppa trycket på slidern. Upprepa vid alla hörn. Ta sedan av taket (tyget) och förvara separat, för att minimera skador på tyget.

RELEASE
SNAP-BUTTON

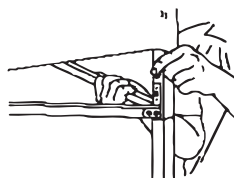

- 3.** Greppa toppen av diamantformen på motsatta sidor, lyft upp och skaka försiktigt tältet samtidigt som du går mot din partner tills enheten är 3/4 stängd. Greppa sedan de två ytterbenen och tryck ihop dem för att stänga helt (var försiktig så att du inte klämmer fingrarna). Placera tältet i medföljande väska innan du förvarar tältet.




(Engelska)


Assembly Instructions - Quicktent (Popup Tent)

Read the instructions carefully before assembly.


- 1.** Place the tent in the center of your desired area. Remove the cover. Have two people stand on opposite sides, each holding an outer leg. Lift the tent off the ground and step backward, stopping when the frame is almost fully extended.

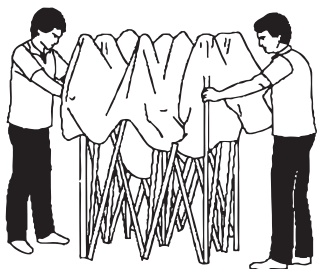


- 2A.** Grasp the bottom of the diamond shape (as shown) on opposite sides. Lift up and step backward until the tent is fully open, being careful not to pinch your fingers. (For larger tents, such as 3x6, see 2B)

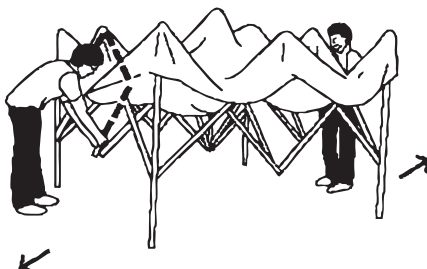


- 2B.** (For larger tents, such as 3x6): Each person should move to the middle leg on the longer side of the tent. Grasp the bottom of the diamond shape (as shown), lift up, and step backward simultaneously until the tent is fully open, being careful not to pinch your fingers at the end of the truss.

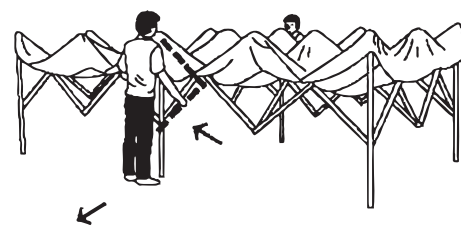

- 4.** Engage the auto slider at each corner by pushing up with one hand while holding down the top of the leg with the other hand. The snap button will engage in the groove. Repeat on all legs.

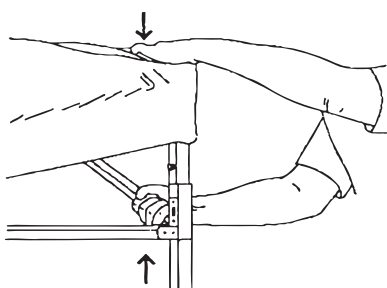

- 5.** Lift two adjacent outer legs and pull out the inner legs until they snap lock. Repeat on all legs. Raise or level the tent using the adjustment holes located near the bottom of each leg.

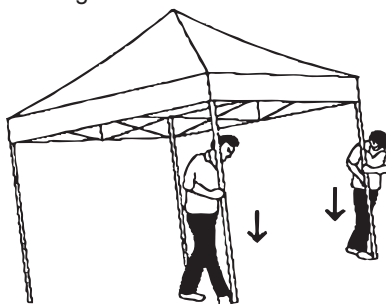


Important!

- **Windy conditions:** Use stakes or tent weights
- **Heavy wind:** Take the tent down.
- **Wet fabric:** Let the tent dry completely before closing.
- **Storage:** Use the cover bag when not in use.
- **Cleaning:** Use mild detergent and water.
- **NOTE:** Do not leave the tent unattended.


After use

- 1.** Lift two legs slightly, press the snap button, and telescope the inner legs up into the outer legs. Repeat on the opposite side.

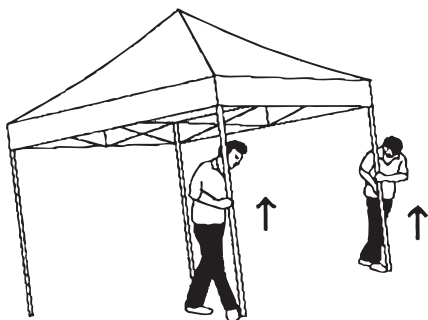

- 2.** Release the auto slider at each corner by pressing the snap button to release pressure on the slider. Repeat on all corners. Remove the roof (fabric) and store separately, to minimize damage to the fabric.

RELEASE
SNAP-BUTTON

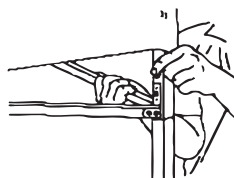

- 3.** Grasp the top of the diamond shape on opposite sides, lift up, and gently shake the tent while stepping toward your partner until the unit is 3/4 closed. Then, grasp two outer legs and push them together to fully close (be careful not to pinch your fingers). Put on the cover before storing the tent.

